


# QUICK START GUIDE

MODEL: BWA18SB001


<https://1800customersupport.com/brandsupport/bwa18sb001/>

## Package content



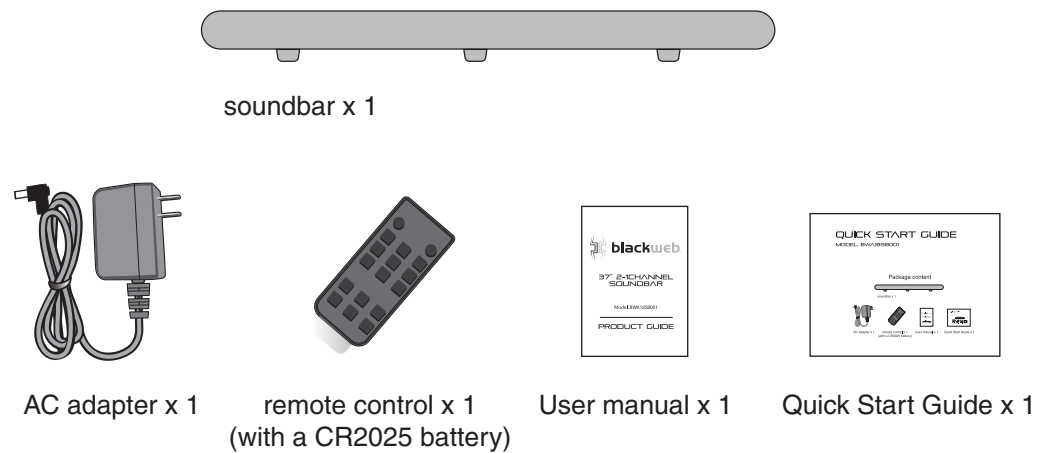


## 2 Positioning

Place the soundbar on a flat stable surface. For optimal performance, the soundbar should be centered underneath the TV or monitor. Be sure there is nothing blocking the front of the soundbar, and the space between the soundbar and the surface is not obstructed.

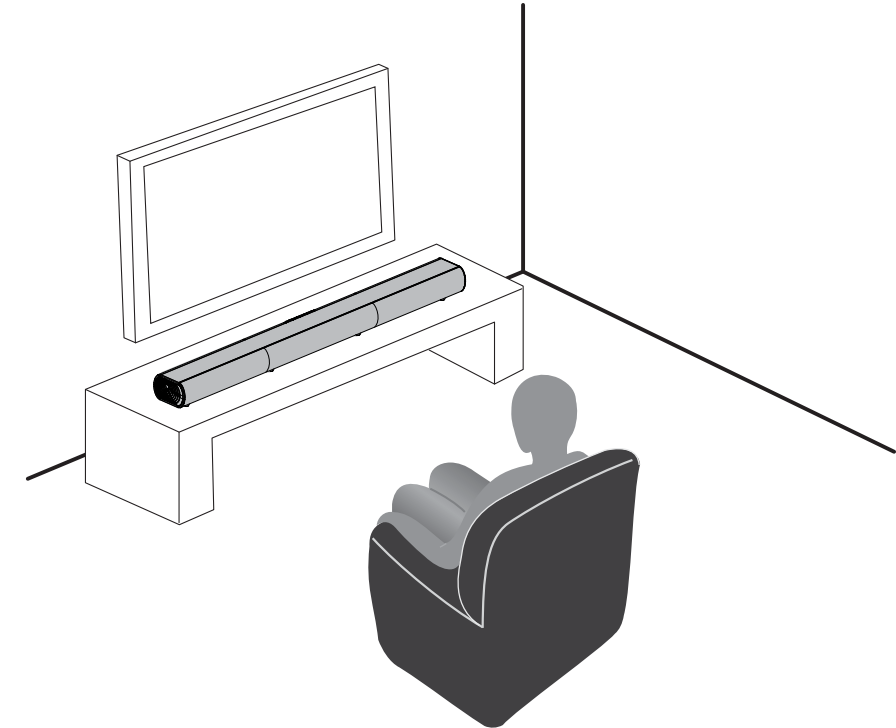


## 1 Identification of all buttons and jacks

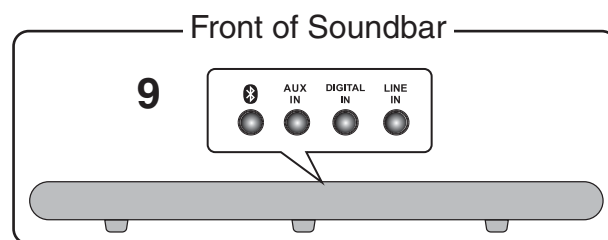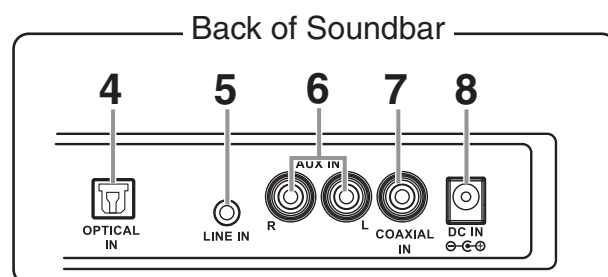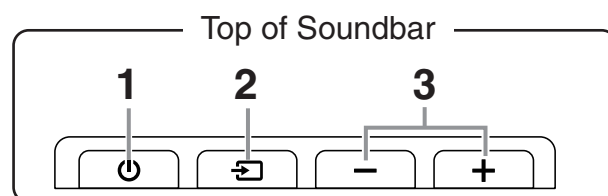


- 1 | / Standby/ON button
- 2 | SOURCE button
- 3 | - / + VOLUME button
- 4 | OPTICAL IN jack
- 5 | LINE IN 3.5mm jack
- 6 | AUX IN R / L jack
- 7 | COAXIAL IN jack
- 8 | DC IN jack
- 9 | LED indicators
  - BLUETOOTH BLUE indicator
  - AUX IN RED indicator
  - DIGITAL IN AMBER indicator
  - When OPTICAL IN is selected AMBER indicator will illuminate.
  - When COAXIAL IN is selected AMBER indicator will be flashing.
  - LINE IN GREEN indicator

## 3 Connecting with a TV, Set-top box or Blu-ray / DVD Player


Up to three audio sources can have direct wired connections to the soundbar. Identify the AUDIO OUT jacks (OPTICAL OUT/COAXIAL OUT/AUX OUT) on the device you are attaching (e.g., TV, Blu-ray player, or set top box). Choose the option below which best fits your audio source. The corresponding button on the remote control or soundbar allows you to switch between sources.

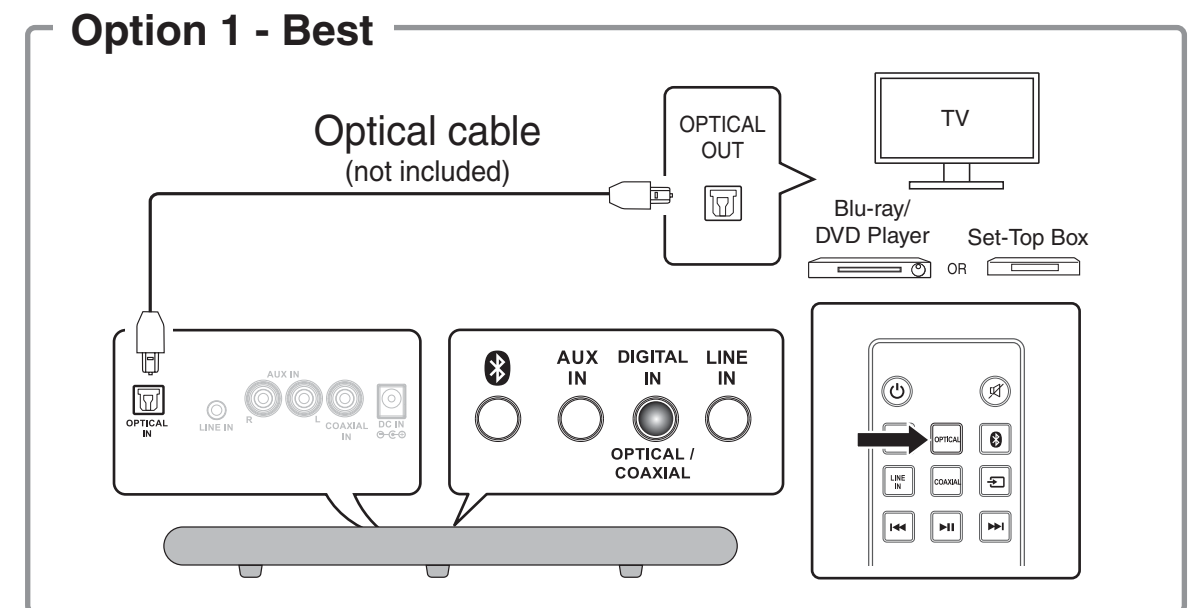

## Option 2 - Better

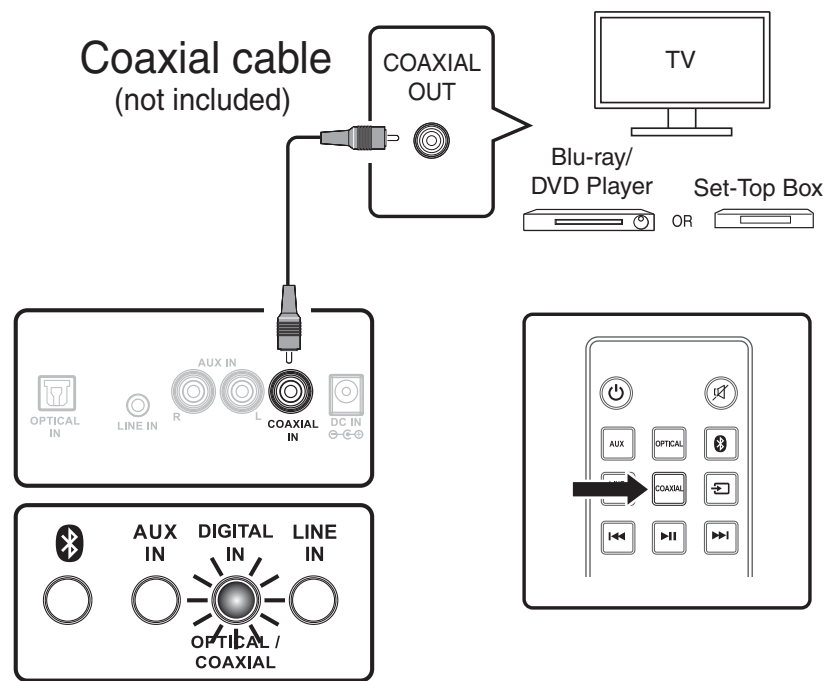

## Option 3 - Good

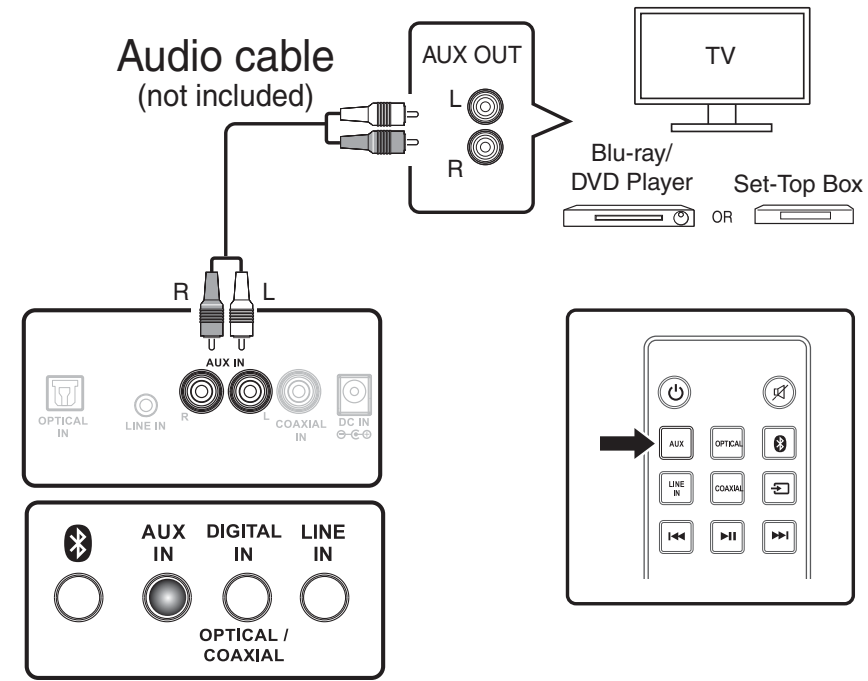

## Troubleshooting

The unit does not switch on.

- Make sure it is plugged in.
- Press STANDBY/ON button to turn on the Soundbar.

I have no sound.

- Press the VOLUME  $- / +$  button on the top of the Soundbar or VOL  $- / +$  button on the remote.
- Ensure the source you've selected is outputting audio. If you're using "audio out" from your TV, ensure your TV is configured to output audio (see TV's menu settings).
- Ensure your AV connections are properly made (ensure you don't have any loose connections).
- Ensure you've selected the correct source (input) - the LEDs located on the top of the Soundbar will indicate the currently-selected source (input).
- Mute is activated (the 4 LEDs on top of the Soundbar flashes). Press the mute button on the remote control.
- Ensure the input source is selected PCM output on the setup menu of the input device.


Cannot setup Bluetooth pairing

- Reset the bluetooth connection by turning off and on your connecting device, or this Soundbar, or select other SOURCE on this Soundbar then back to BT mode again.

The remote control doesn't work

- If battery is weak, please replace the battery and ensure the new battery is installed correctly.
- Please ensure there is nothing blocking the remote sensor on the front of the Soundbar (refer to the User manual for the location of remote sensor).

## 4 Connecting with other devices

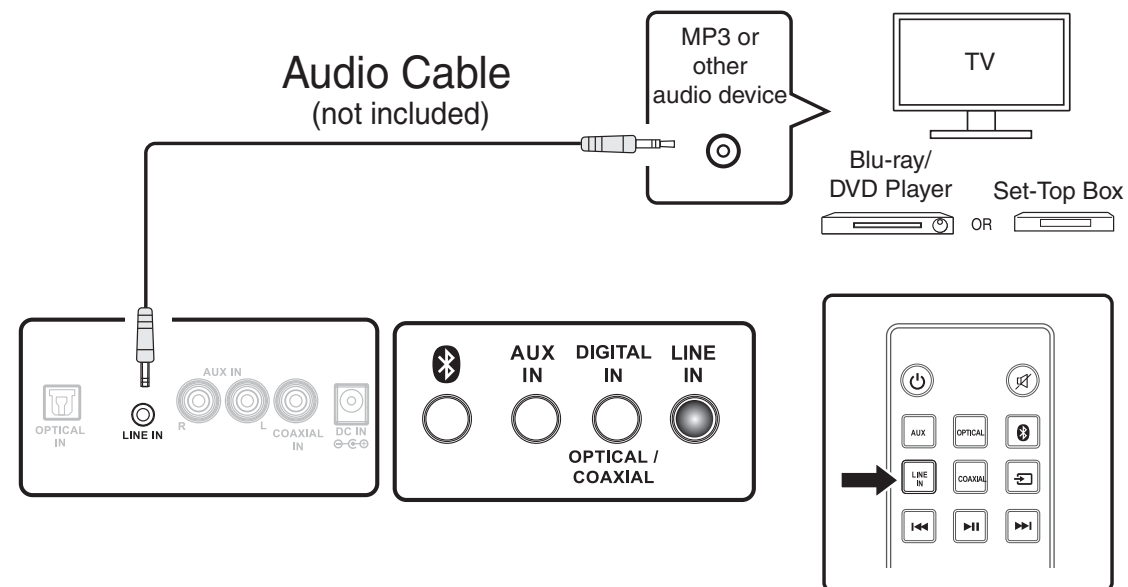

## 5 Bluetooth Pairing

