

# Keypad Deadbolt (BE365)

## Lock Parts

### Keypad

- Used to enter codes for programming and unlocking. See the **Keypad Locks Programming Guide** for more information.

### Outside Thumbturn

 
- Used to unlock the lock after a valid User Code has been entered, or to lock the lock after the Schlage button has been pressed.

### Cylinder

- Used only in emergency situations to unlock the lock. See **Emergency Key Override** on page 3.

### Inside Thumbturn

- Used to lock or unlock the lock.

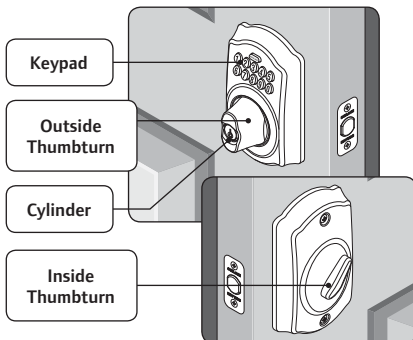



## Standard Operation



*If lighting is low, press the Schlage button to illuminate the keypad before beginning.*

### Locking

 
 
1. Press the Schlage button.\*
2. Rotate the thumbturn away from the hinges.

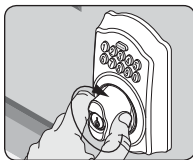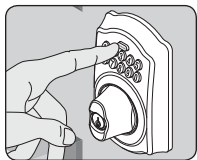

\* If the Turn Lock feature is disabled, a valid User Code must be entered to lock the door. See **Turn Lock Feature** on page 7.

### Unlocking

  1. Enter a User Code into the keypad.
2. Rotate the thumbturn toward the hinges.

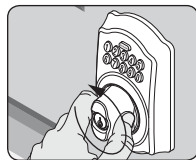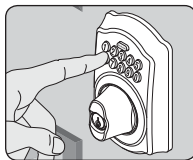

**\*\* You should hear a beep for each button press**